

## WE ALSO CARRY:

- Water Level Meters
- Data Loggers
- Interface Meters
- Conductivity Meters
- Temperature Meters
- Well Depth Indicators

 
## Coming Soon:

- Borehole Inspection Camera
- Conductivity Logger

## HERON INSTRUMENTS INC.

447 Moxley Road | Dundas, ON Canada L9H 5E2  
1-800-331-2032 | [info@heroninstruments.com](mailto:info@heroninstruments.com)

Please visit our website [www.heroninstruments.com](http://www.heroninstruments.com)  
for more information on the complete Heron line.



## Well Casing Indicator Probe

Operating and Maintenance Instructions



[www.heroninstruments.com](http://www.heroninstruments.com)

# Well Casing Indicator Probe Instructions



## Item

Detachable Link  
Well Casing Indicator Probe

## Part Numbers

1412  
1503

## Step 1:

Remove the **Water Level Meter Probe** from the Detachable Link and replace with **Well Casing Indicator Probe**. Make sure the connection is tight (do not over tighten).

## Step 2:

While the **dipper-T** is in static level mode, lower the probe down the side of the casing (use the tape guide to protect the tape from sharp edges). While the probe is within the magnetic field of the steel casing, an auditory and visual signal is active. When the probe leaves the magnetic field the signal stops, indicating the bottom of the steel casing. The well casing measurement is then taken directly from the tape. *Note: The datum point indicator is on the back of the probe holder.*

For general care, equipment checks, cleaning and warranty information please refer to the **dipper-T Water Level Meter with drawDown Operating and Maintenance Instructions** or visit our website [www.heroninstruments.com](http://www.heroninstruments.com).

**Warranty is conditional upon adherence to these guidelines.**