

## WE ALSO CARRY:

- Water Level Meters
- Data Loggers
- Interface Meters
- Conductivity Meters
- Temperature Meters
- Well Casing Indicators

 
## Coming Soon:

- Borehole Inspection Camera
- Conductivity Logger

## HERON INSTRUMENTS INC.

447 Moxley Road | Dundas, ON Canada L9H 5E2  
1-800-331-2032 | [info@heroninstruments.com](mailto:info@heroninstruments.com)

Please visit our website [www.heroninstruments.com](http://www.heroninstruments.com)  
for more information on the complete Heron line.




## Well Depth Indicator Probe

Operating and Maintenance Instructions



[www.heroninstruments.com](http://www.heroninstruments.com)

# Well Depth Indicator Probe Instructions

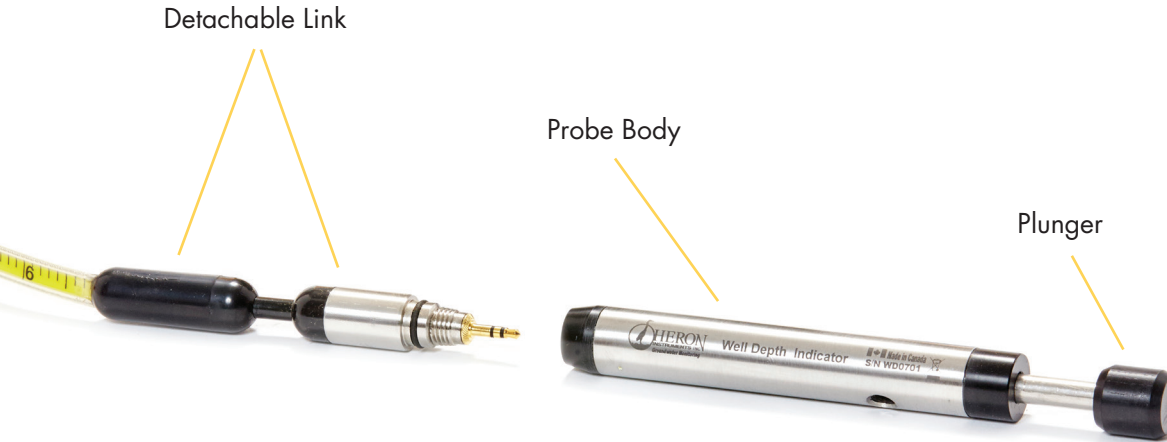

## Item

Detachable Link  
Well Depth Indicator Probe

## Part Numbers

1412  
1502

## Step 1:

Remove the **Water Level Meter Probe** from the Detachable Link and replace with the **Well Depth Indicator Probe**. Make sure the connection is tight (do not over tighten).

## Step 2:

While the **dipper-T** is in water level meter mode, lower the probe down the side of the casing (use the tape guide to protect the tape from sharp edges). When the **Well Depth Indicator Probe** reaches the bottom of the well, the pressure sensitive plunger enters the probe body closing a switch, initiating an audible and visual signal at the top of the well. The well depth reading is taken directly from the tape. *Note: The datum point indicator is on the back of the probe holder.*

For general care, equipment checks, cleaning and warranty information please refer to the **dipper-T Water Level Meter with drawDown Operating and Maintenance Instructions** or visit our website [www.heroninstruments.com](http://www.heroninstruments.com).

**Warranty is conditional upon adherence to these guidelines.**